

Ensure rowlock
slot is fitted across
the beam for oar
to tilt correctly

